 


BERKER Q.7


Switch / push-button for blinds

Switch / push-button for blinds

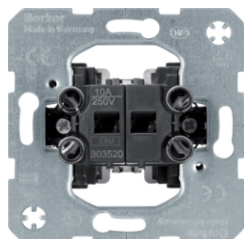

Blind series switch 1pole

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Blind series switch 1pole Blind control	3035 20	0,00		10

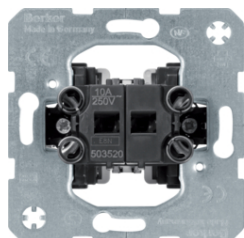 


Blind series push-button 1pole

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Blind series push-button 1pole Blind control	5035 20	0,00		10



Rocker 2gang with imprinted arrow symbol

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Rocker 2gang with imprinted arrow symbol Berker Q.1/Q.3, polar white velvety	1625 60 89	0,00		10
Rocker 2gang with imprinted arrow symbol Berker Q.1/Q.3, anthracite velvety, lacquered	1625 60 86	0,00		10

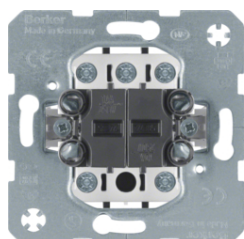 


Group series push-button, 4 NO contacts, common input terminal - neutral position

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Group series push-button, 4 NO contacts, common input terminal with neutral-position, Light control	5034 04	0,00		10



Rocker 2gang with imprinted arrows symbol

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Rocker 2gang with imprinted arrows symbol Berker Q.1/Q.3, polar white velvety	1644 60 89	0,00		10
Rocker 2gang with imprinted arrows symbol Berker Q.1/Q.3, anthracite velvety, lacquered	1644 60 86	0,00		10

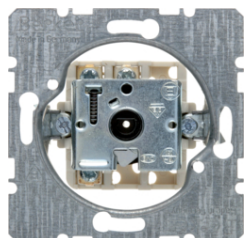 


Rotary switch for blinds 1pole

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Rotary switch for blinds 1pole Blind control	3841	0,00		10

BERKER Q.7

 Switch / push-button for blinds

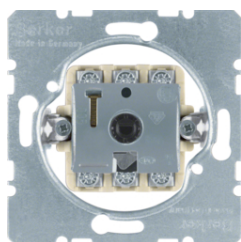

Rotary switch for blinds 2pole

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Rotary switch for blinds 2pole Blind control	3842	0,00		10




Centre plate with rotary knob for rotary switch for blinds

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Centre plate with rotary knob for rotary switch for blinds Berker Q.1/Q.3, polar white velvety	1080 60 89	0,00		1
Centre plate with rotary knob for rotary switch for blinds Berker Q.1/Q.3, anthracite velvety, lacquered	1080 60 86	0,00		1
Sealing set for socket outlets/centre plates Berker K.x/Q.x, transparent	1010 72 00	0,00		1




Interlock disk for rotary switch for blinds

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Interlock disk for rotary switch for blinds Accessories	1861	0,00		10
Interlock disk for rotary switch for blinds Accessories	1861 01	0,00		10

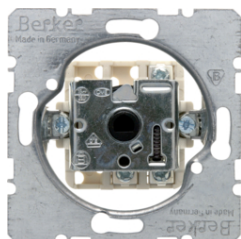 

Switch for blinds 1pole for centre plate with lock

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Switch for blinds 1pole for centre plate with lock Blind control	3851	0,00		10

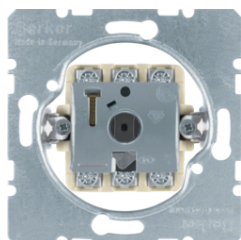 

Switch for blinds 2pole for centre plate with lock

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Switch for blinds 2pole for centre plate with lock Blind control	3852	0,00		10



Centre plate with lock and push lock function for switch for blinds - key can be removed in neutral position

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Centre plate with lock and push lock function for switch for blinds Key can be removed in 0 position, Berker Q.1/Q.3, polar white velvety	1081 60 89	0,00		1
Centre plate with lock and push lock function for switch for blinds Key can be removed in 0 position, Berker Q.1/Q.3, anthracite velvety, lacquered	1081 60 86	0,00		1

BERKER Q.7

Switch / push-button for blinds




Centre plate with lock and push lock function for switch for blinds - key can be removed in 3 positions

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Centre plate with lock and push lock function for switch for blinds Key can be removed in 3 positions, Berker Q.1/Q.3, polar white velvety	1082 60 89	0,00		1
Centre plate with lock and push lock function for switch for blinds Key can be removed in 3 positions, Berker Q.1/Q.3, anthracite velvety, lacquered	1082 60 86	0,00		1




Centre plate with lock and touch function for switch for blinds - key can be removed in neutral position

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Centre plate with lock and touch function for switch for blinds Key can be removed in 0 position, Berker Q.1/Q.3, polar white velvety	1083 60 89	0,00		1
Centre plate with lock and touch function for switch for blinds Key can be removed in 0 position, Berker Q.1/Q.3, anthracite velvety, lacquered	1083 60 86	0,00		1

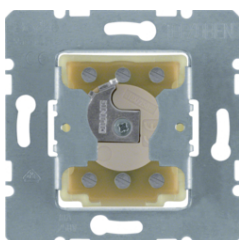 


Switch for blinds 2pole for lock cylinder

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Switch for blinds 2pole for lock cylinder Blind control	3822 10	0,00		10

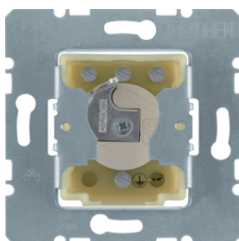 


Switch for blinds 1pole for lock cylinder - earthing contact - neutral position

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Switch for blinds 1pole for lock cylinder with earth contact, with neutral-position, Splash-protected flush-mounted IP44	3821 20	0,00		10

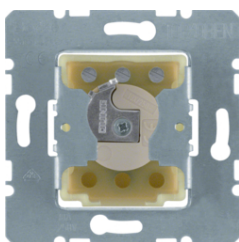 

Push-button for blinds 1pole for lock cylinder

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Push-button for blinds 1pole for lock cylinder Blind control	3831 10	0,00		10

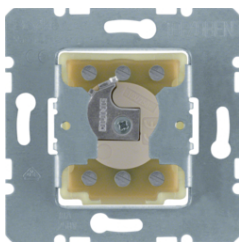 


Push-button for blinds 2pole for lock cylinder

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Push-button for blinds 2pole for lock cylinder Blind control	3832 10	0,00		10

BERKER Q.7

 Switch / push-button for blinds

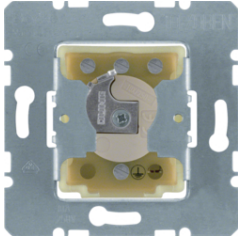

Push-button for blinds 1pole for lock cylinder - earthing contact

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Push-button for blinds 1pole for lock cylinder with earth contact, Splash-protected flush-mounted IP44	3831 20	0,00		10



Centre plate for key push-button for blinds/key switch

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Centre plate for key push-button for blinds/key switch Berker Q.1/Q.3, polar white velvety	1506 60 89	0,00		10
Centre plate for key push-button for blinds/key switch Berker Q.1/Q.3, anthracite velvety, lacquered	1506 60 86	0,00		10
Sealing set for key switches/key push-buttons Berker K.x/Q.x, transparent	1010 70 00	0,00		1




Lock cylinder with differing closures

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Lock cylinder Accessories	1818	0,00		1



Lock cylinder with same closures

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Lock cylinder Accessories	1818 01	0,00		1

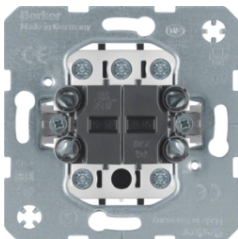 

GROUP PUSH BUTTON CAVITY WALL MOUNTING

DESCRIPTION	ART NO.	PRICE	PRICE GROUP	P.U.
Modul-inserts	6150 34 04	0,00		10