
INSTRUCTION


ISO pipe fitting instruction for assembly and dismantling



ASSEMBLY

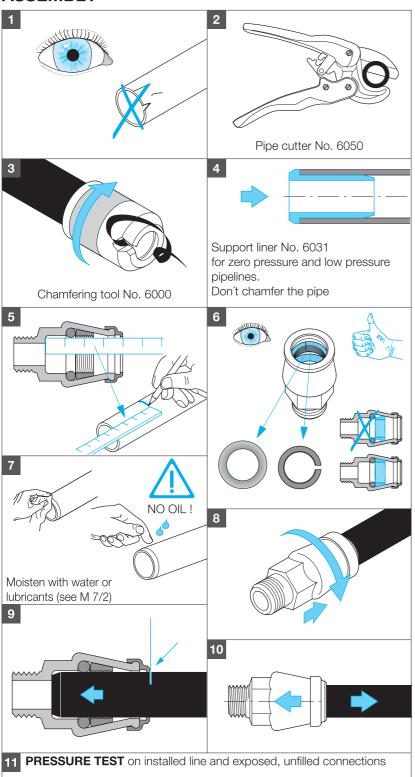

DISMANTLING

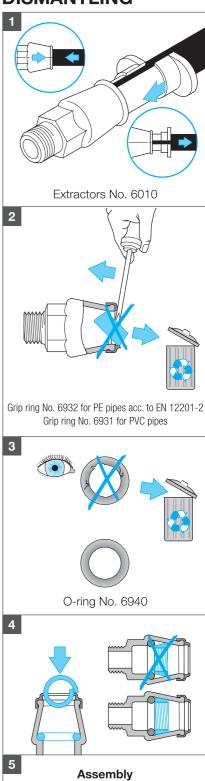

Max. torque for tightening the threads (observe pipe fitter rules acc. to national standards):					
1/2"	3/4"	1"	11/4"	1½"	2"
20 Nm	25 Nm	40 Nm	42 Nm	42 Nm	45 Nm



E. Hawle Armaturenwerke GmbH 4840 Vöcklabruck - Austria - Wagrainer Straße 13 Tel.: +43 (0) 7672 72576 0 - Fax: +43 (0) 7672 78464 - E-Mail: hawle@hawle.at - www.hawle.com